

Quick Setup


Before using the projector, make sure you read the safety instructions in the online *User's Guide*.

Note: Availability of models varies by country.

Connect the projector

Choose from the following connections. See the sections below or the online *User's Guide* for details.

Computer

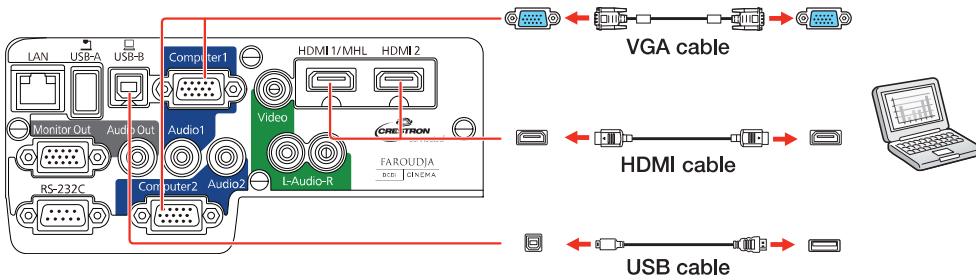


USB port

Connect the square end of a USB cable to the projector's **USB-B** (square) port. Connect the flat end of the cable to any USB port on your computer.

Windows® 2000 SP4 or later: After turning on the projector, follow the on-screen instructions to install the Epson® USB Display software (**EMP_UDSE.EXE**; only on first connection). If the software screen does not display automatically, open **My Computer** or **Computer**, then double-click **EPSON_PJ_UD**.

OS X 10.5.8 or higher: After turning on the projector, the setup folder for USB Display appears in the Finder. Double-click **USB Display Installer** and follow the on-screen instructions to install the Epson USB Display software (only on first connection).

Computer port

Connect one end of a VGA cable to the projector's **Computer1** or **Computer2** port, and the other end to your computer's  monitor port. If you are using a laptop, switch it to external display (see "Troubleshooting"). You can also connect an audio cable.

HDMI port


Connect one end of an HDMI cable to the projector's **HDMI1** or **HDMI2** port and the other end to an HDMI port on your computer.

Wired network

You can connect the projector to your network using an Ethernet cable. See "Project over a wired network" for more information.


Video device

Connect up to 5 video devices and use the projector or remote control to switch between them.

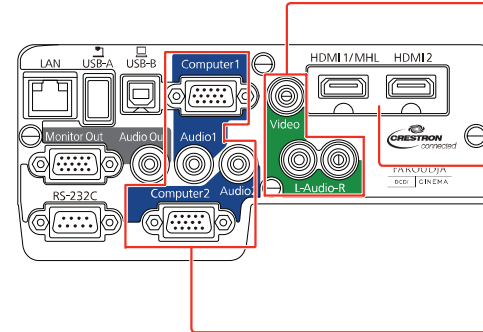

Mobile media device


Connect tablets, smartphones, and other mobile devices to the projector's **HDMI1/MHL** port.

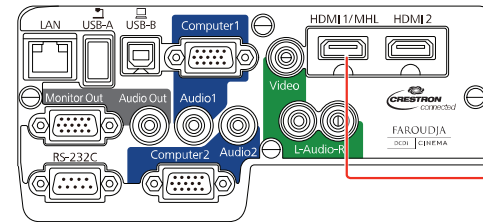

Devices that support an MHL connection, such as the Apple® iPhone™ and the Roku® Streaming Stick™, may not require an MHL cable. Not all devices are compatible. Check your device's documentation for details.

Camera, USB device, or Epson® document camera

Connect a digital camera, USB flash drive, or Epson® document camera to the projector's **USB-A** port.

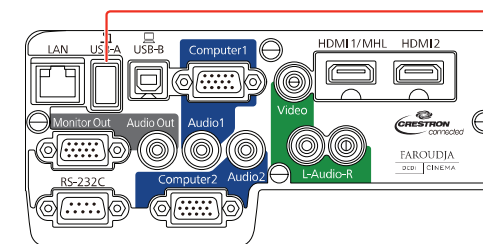


If you connect a digital camera, USB flash drive, or Epson document camera, you can use the projector's PC Free feature to project content from the device. For details on other Epson document cameras to the projector, see the *User's Guide* for details.

External monitor and external audio


You can also connect an external monitor and external audio system to the projector. For details, see the *User's Guide*.



- 3 Open the **A/V Mute** slide all the way.

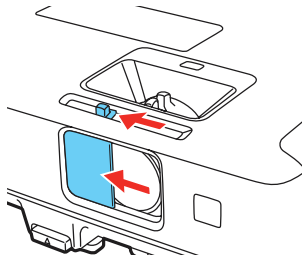

- 4 Press the **Power** button on the projector or remote control. The projector beeps, the Status light flashes blue, and then stays on.

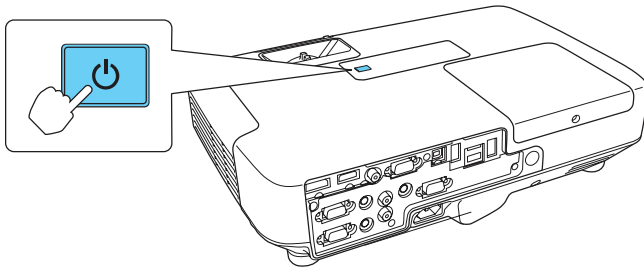

Note: To shut down the projector, press the **Power** button twice, then unplug it. You don't have to wait for the projector to cool down.


- 5 The default language of the menu system is **English**. To select another language, press the **Menu** button on the remote control. Select **Extended** and press **Right**. Select **Language** and press **Right**. Select your language and press **Right**. Press the **Menu** button to exit the menu system.

Adjust the image


- 1 If you don't see an image, press the **Source Search** button on the projector or the remote control to select the image source.

Note: If you still see a blank screen or have other display problems, see the troubleshooting tips on the back of this sheet.

- 2 To raise the image, press the foot release button and lift the front of the projector. Release the button to lock the foot in position.

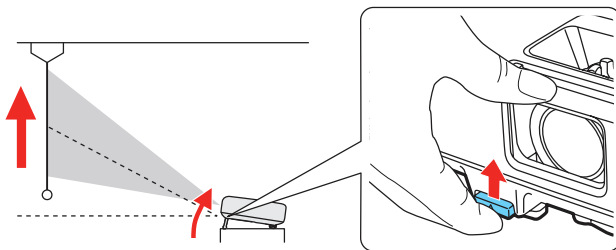


- 3 Turn the zoom ring to reduce or enlarge the image.

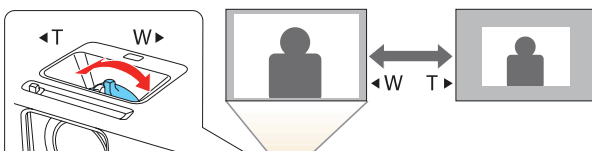

Using the remote

Make sure the batteries are installed correctly.

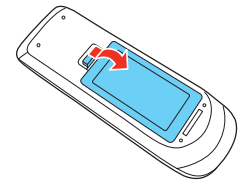

Turn projector on and off

Access projector menus

Turn off projector display

For more information on using the remote control, see the *User's Guide*.


Project wirelessly

Follow the steps here to connect the projector to a wireless network (802.11g, or 802.11b wireless network card or built-in wireless interface, Windows Vista®, Windows XP Professional, or OS X 10.5.8 to 10.9).

- 1 To install the optional wireless network card, see the *User's Guide*.

- 2 Remove the screw securing the projector to the stand and remove the stopper.

- Replace the wireless LAN module stopper and secure it using the screw you removed.

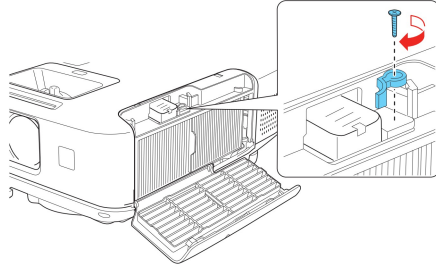


- Close the air filter cover.

- To configure your projector for your wireless network, do one of the following:


- If you're using the optional Quick Wireless Connection USB key, insert it into the projector's **USB-A** port, look for the displayed message, remove the key, and connect it to a USB port on your computer. Follow the on-screen instructions to install the driver, then run your presentation. For details, see the online *User's Guide*.
- If you're not using the key, continue with the steps below.

- Press the **Menu** button on the remote control, select the **Network** menu, and press \leftarrow/\rightarrow .

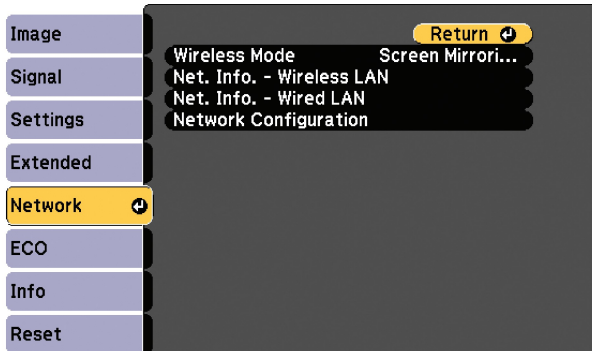

- Choose **Network Configuration** and press \leftarrow/\rightarrow .

- Select the **Wireless LAN** menu and press \leftarrow/\rightarrow .

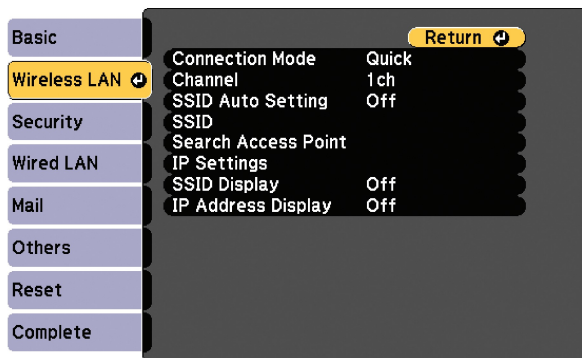

- Choose **Connection Mode**, press \leftarrow/\rightarrow , select **Quick** (for a direct connection to a computer, tablet, or smartphone) or **Advanced** (for a connection to a router or access point), then press \leftarrow/\rightarrow again. When you're finished, press **Esc** to return to the Wireless LAN menu.

- If you chose the Advanced connection mode, select **SSID**, press \leftarrow/\rightarrow , and

- If you chose the Advanced connection mode, press \leftarrow/\rightarrow .

If your network assigns addresses automatically, turn off **DHCP** and enter the projector's **Gateway Address**, as needed.

To enter numbers, use the arrow keys to highlight a number, then press \leftarrow/\rightarrow . When entering an address, highlight

- To prevent the SSID and IP address from appearing on the standby screen, set the **SSID Display** settings to **Off**.

- When you're finished selecting settings, press **Esc**.

- If you are connecting the projector to a network, you're finished.


- Select **Complete** and press \leftarrow/\rightarrow to save your settings.

- See "Install network software"


Project over network

Follow the steps here to configure your projector's menu system.


- Plug in and turn on the projector.
- Press the **Menu** button on the remote control and press \leftarrow/\rightarrow .

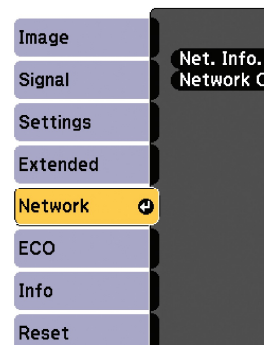

- Select **Network Configuration**.
- Select the **Basic** menu and press \leftarrow/\rightarrow .

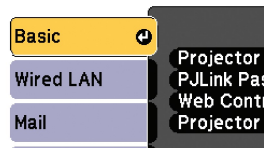

- 6 Select the **Wired LAN** menu and press ↵/⏏.

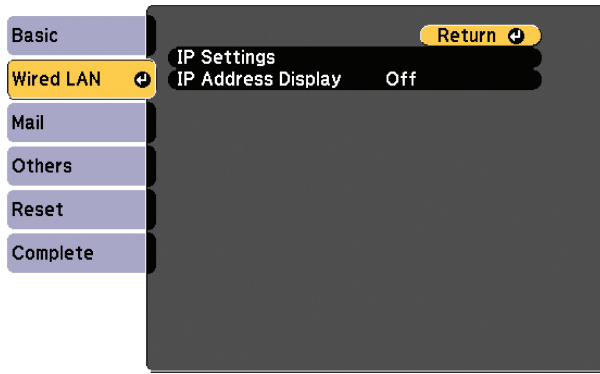

- 7 Choose **IP Settings** and press ↵/⏏.
- 8 If your network assigns addresses automatically, select **IP Settings** and turn on the **DHCP** setting. If not, turn off the **DHCP** setting and enter the projector's **IP Address**, **Subnet Mask**, and **Gateway Address**, as needed.
- 9 To prevent the IP address from appearing on the network standby screen, set the **IP Address Display** setting to **Off**.
- 10 When you are finished, select **Complete** and press ↵/⏏, then press ↵/⏏ again to save your settings.
- 11 Press the **Menu** button to exit the menu system.
- 12 See "Install network software" for additional instructions.

Mobile device

To project from an iOS or Android™ device, download and install the Epson iProjection™ app. Visit epson.com/projectorapp (U.S.) or epson.ca/projectorapp (Canada) for more information.



Install network software

Install the EasyMP® Network Projection software on each computer that will project over the network. Use the CD labeled *Epson Projector Software* to install the program.

For instructions on installing and using your network software, click the icon on your desktop to access the online *EasyMP Network Projection Operation Guide* (requires an Internet connection). If you don't see the EasyMP Network Projection Guide icon, you can install it from the projector CD or go to the Epson website, as described on the right.

To monitor and control your projector over the network, download and install the EasyMP Monitor software and manual from the Epson support web site. You can install a link to the downloads page from the projector CD or go to the Epson website, as described on the right.

Troubleshooting

Where to go

Manuals

For more information about using the projector, visit the Epson website. If you don't have icons to the manuals, you can go to the Epson website, as described on the right.

Telephone support services

To use the Epson® PrivateLine® Support service, call 1-800-451-6243. Support is available for the duration of your warranty. A support specialist by calling (562) 222-3333.

Support hours are 6 AM to 8 PM, Pacific Time, Monday through Friday, 7 AM to 4 PM, Pacific Time, Saturday. Hours are subject to change without notice. Toll or long distance charges may apply.

Internet support

Visit epson.com/support (U.S.) or epson.ca/support (Canada) for common problems. You can download manuals, user guides, and troubleshooting advice, or e-mail support@epson.com.

Registration

Register today to get product updates and newsletters included with your projector or registered online at epson.com/register.

Optional accessories

For a list of optional accessories, see the Epson website.

You can purchase screens or other accessories from the Epson website. To find the nearest reseller, call 800-451-6243 or purchase online at epsonstore.com.